


September 20, 2016

RE: Electric Power Transfer (EPT) Prep Location on Frameworks Doors and Frames

This document clarifies the Frameworks Standard location for EPT preps. Unless otherwise directed, or unless there is a conflict with other hardware preps, Frameworks will prep their frames and doors with the top of the cutout for the EPT prep located 6" (15.2cm) below the bottom of the first hinge cutout. For doors and frames ordered that are specified to be prepped with continuous hinges, the location of the top of the cutout of the EPT prep will be 15-1/2" (39.4cm) from the underside of the frame header.

See below for a diagram:

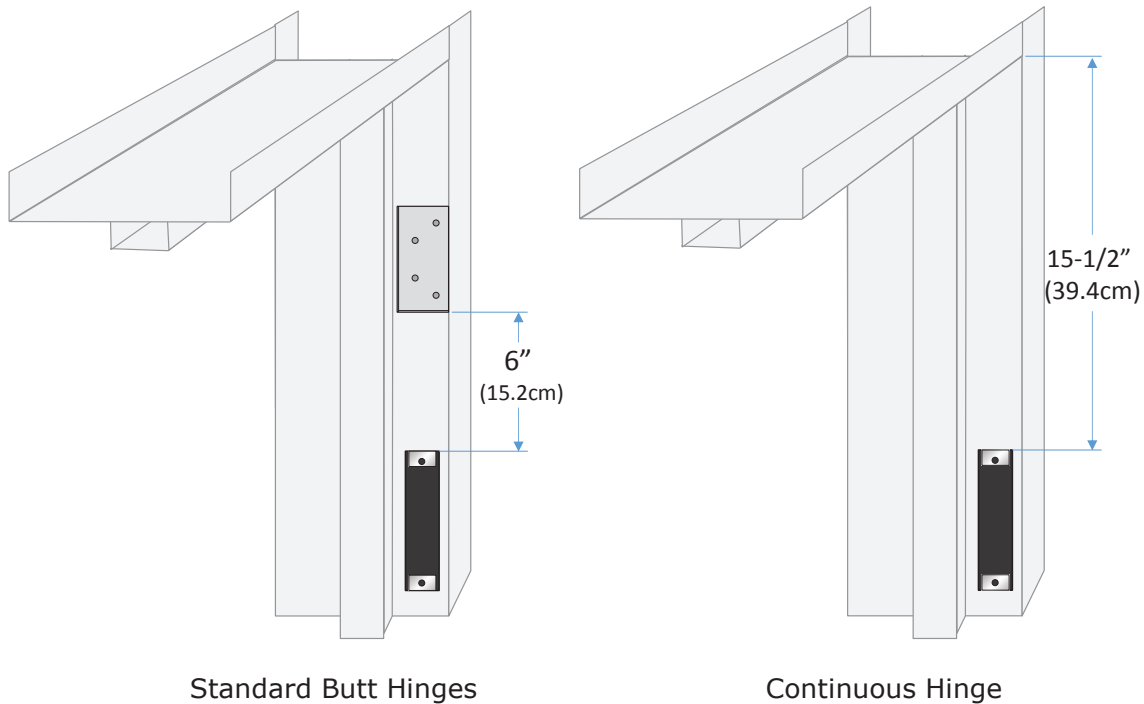

Please contact your customer support representative if you have any questions about this, or if you need further clarification. (713) 692-5222